


2" CROMMELINS FLEXIBLE SUBMERSIBLE PUMP OPERATING & SAFETY INSTRUCTIONS

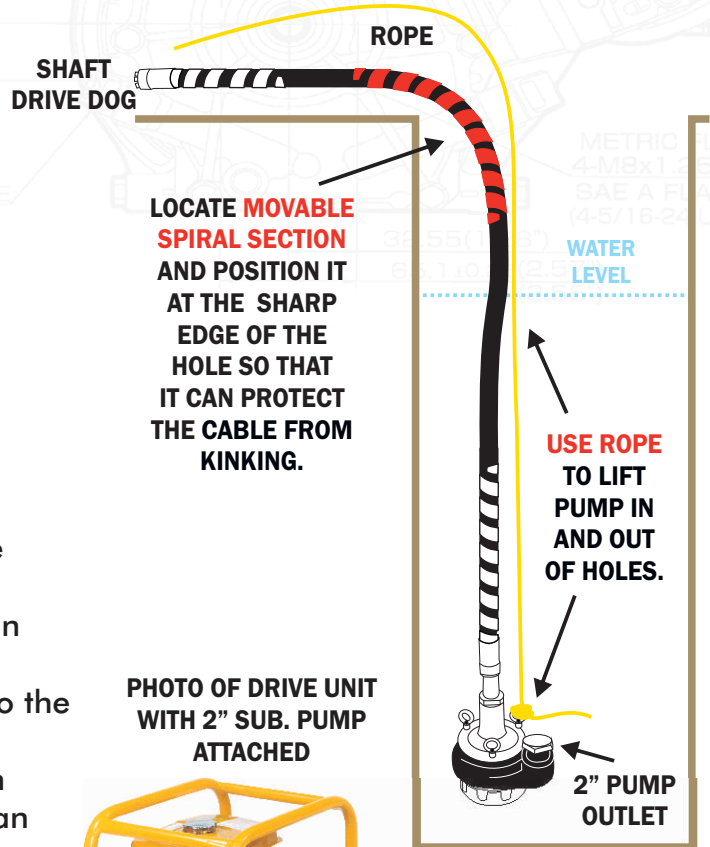

KEY OPERATING INSTRUCTIONS

- Connect the Shaft Drive Dog into the Drive Unit and lock before starting the engine.
- Ensure the pump head is fully submerged in water before starting engine.
- Ensure the 2" Hose is connected securely to the Delivery Pump Outlet before starting.
- Locate Movable Spiral Section and position it at the sharp edge of the hole so that it can protect the Shaft Cable from kinking.
- Use the rope to lift the pump in and out of holes correctly (see diagram).

SAFETY TIPS:

- Ensure the Pump Shaft drive is securely connected to the Drive Unit with the latch pin fully engaged.
- This pump is designed for water transfer it is not suitable for chemical use.
- If the pump becomes clogged, turn the unit off, then remove the bottom strainer and clear any debris.
- Take care not to subject the Flexible Drive Shaft to sharp bends or damage to the cable could occur.
- Remove the pump from the water when not in use.
- If suspending the pump down a well use a rope or cable to hold the pump in position.
- The pump must be regularly maintained. (Service at least every 6 months).
- Beware of uneven slippery work surfaces and exercise care when working around holes or obstacles.
- The operator needs to take regular breaks to provide relief for safe work practices.
- Keep hands and feet away from vibrating end while in use.
- When greasing, ensure you are using Shell Alvania EPLF2 grease.



CROMMELINS[™]
MACHINERY

HEAD OFFICE

Address: 139 Welshpool Road, WELSHPOOL WA 6106
Mailbox: PO Box 352 BENTLEY WA 6982
Ph: (08) 9350 5588 Fax: (08) 9451 6381
Email: email@crommelins.com.au
Web: www.crommelins.com.au

SPAREPARTS

Ph: 1300 554 524
Freecall FX: 1800 636 281
spareparts@crommelins.com.au
SERVICE
Ph: (08) 9350 5588

PERTH

SYDNEY

BRISBANE

MELBOURNE

ADELAIDE